








 











 

 





 

 

 


















 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Info		Info
	Home		Smart
	Menu		Menu
	Back		Back
	Exit		Exit



 


 
 



Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Netflix		Media
	Guide		Guide
	Source		AV
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	<</Reveal		<<
	Play/Index		Play
	>>/Hold		>>
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Subtitle		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	FAV		Pre Ch
	AD	 +  Shift + Subt	
	I/II		Dual

Originalfernbedienung Ersatzfernbedienung

