




 


 
 

 

 

 



 

 

 







 




 
 





 

 



 
 
 

 





 












Originalfernbedienung Ersatzfernbedienung



 






	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Source		AV
	Home		Shift + Smart
	Menu		Menu
	Back		Back

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Netflix		Media
	prime video		Shift + Media
	Internet		Smart
	YouTube		3D
	Vol+		Vol +
	Vol-		Vol -
	Text		Text
	[++]		Options
	Guide		Guide
	P+		Ch +
	P-		Ch -





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	<</Reveal		<<
	Play/Index		Play
	>>/Hold		>>
	Subtitle		Subt
	Pause		Pause
	AD	 + 	Shift + Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

