 

 

 





 

 

 

 


 
 

 

 









 



 

 

 


 
 

 



 





 


 

 


 



**Originalfernbedienung Ersatzfernbedienung**

	1		1
	2		2
	3		3
	-		Left
	+		Right
	4		4
	5		5
	6		6
	J -		Down
	J +		Up
	7		7
	8		8
	9		9
	◀ Left		Shift + Left
	▶ Right		Shift + Right
	1-		Guide / EPG / -/--
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	2-		Fav / Marker / PC
	▼OO		Audio / Lang I/II
	←OO→		Sound / Title
	C/P		D.Menu / Top
	↑↔↑ / Freeze		Rec / Rec Mode
	↑ / →≡		Stop / Hold
	P- / Text Size		CH- / Page-
	P+ / Text Hold		CH+ / Page+
	Reveal		Setup / OPT /
	Subcode		Zoom / Size
	⇒→		Info / Angle
	[100]		OK
	Timer		Sleep / Timer
	Text		Text / Goto
	[ ]		Display / Media
	1/2		Menu / Home
	Brightness+		Shift + >>1 / Preset+



