 



 

 










 




 

 


 










Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Power Tv		Power
	[+]		Shift + OK
	3D		Zoom / Size
	Theatre		Shift + Smart / List
	<</<I		<< / Tune-
	Play		Play / Slow
	>>/I>		>> / Tune+
	Sync Menu		Shift + D.Menu / Top Menu
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	?/i-Manual		Shift + Setup / OPT / Tools
	Scene		Picture / Format
	BD/DVD Top		Shift + Menu /
	BD/DVD Menu		D.Menu / Top
	Digital/Analog		Shift + Display / Media

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Internet Widgets		Display / Media
	Internet Video		Smart / List
	♥/FAV		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	Right		Right
	[i+]/Info		Info / Angle
	Up		Up
	OK		OK
	Left		Left
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡]/Text		Text / Goto
	0		0
	[...]		Subtitle / EQ
	Vol+		Vol+
	Prog+		CH+ / Page+
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Prog-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<</>		<< / Tune-
	Play		Play / Slow
	>> >		>> / Tune+
	Stop		I<< / Preset-
	Stop / Hold		Stop / Hold
	>>		>> / Preset+
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Right		Right
	[i+]/Info		Info / Angle
	Up		Up
	Left		Left
	Return		Back / Return
	Down		Down
	Home		Shift + Menu /
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[...]		Subtitle / EQ
	Prog+		CH+ / Page+
	Audio		Audio / Lang I/II
	Prog-		CH- / Page-

 


 



 




 















 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<</<		<< / Tune-
	Play		Play / Slow
	>>/ >		>> / Tune+
	<<		<< / Preset-
	Stop		Stop / Hold
	>>		>> / Preset+
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Right		Right
	[i+]/Info		Info / Angle
	Up		Up
	OK		OK
	Left		Left
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /


Originalfernbedienung Ersatzfernbedienung

	Home		Shift + Menu /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡]/Text		Text / Goto
	0		0
	[...]		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Power		Power
	<</<		<< / Tune-
	Play		Play / Slow
	>>/ >		>> / Tune+
	<<		<< / Preset-
	Stop		Stop / Hold
	>>		>> / Preset+
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Right		Right
	[i+]/Info		Info / Angle
	Up		Up
	OK		OK
	Left		Left
	Return		Back / Return
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Home		Shift + Menu /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡]/Text		Text / Goto
	0		0
	[...]		Subtitle / EQ
	Vol+		Vol+
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Vol-		Vol-

