









 










 
 

 

 



 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Mute		Mute / Dimmer
	i		Info / Angle
	Z		Menu / Home





Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	P+		Up
	-		Left
	-		Vol-
	OK		OK
	+		Right
	+		Vol+
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[]		Setup / OPT /
	PAP/Pause		Display / Media
	Size/Stop		Zoom / Size
	Pos/Play		D.Menu / Top
	Red/I<		Red / Netflix / Search
	Green/>I		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow/Pause/<		Yellow / YouTube / Repeat
	Blue/>>		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung







 















 





 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	i		Info / Angle
	Z		Menu / Home
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	P+		Up
	-		Left
	-		Vol-
	OK		OK
	+		Right
	+		Vol+
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[']		Setup / OPT /
	PAP/PAUSE		Pause / Step / Freeze
	SIZE/STOP		Stop / Hold
	Pos/PLAY		Play / Slow
	Red/ <		<< / Preset-
	Green/>		>> / Preset+
	Yellow/PAUSE/<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	Blue/>>>
	TUNE+ >> / Tune+

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung















 









 
 




 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/-		Guide / EPG / -/-
	0		0
	Mute		Mute / Dimmer
	i		Info / Angle
	Z		Menu / Home

 



Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	P+		Up
	-		Left
	-		Vol-
	OK		OK
	+		Vol+
	+		Right
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[]		Setup / OPT /
	PAP/Pause		Pause / Step / Freeze
	Size/Stop		Stop / Hold
	Pos/Play		Play / Slow
	Red/I<		I<< / Preset-
	Green/>I		>>I / Preset+





Originalfernbedienung Ersatzfernbedienung

	Yellow/<<		<< / Tune-
	Blue/>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung





















 

 



 

 

 

 





Originalfernbedienung Ersatzfernbedienung



	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/-		Guide / EPG / -/-
	0		0
	i		Info / Angle
	Z		Menu / Home
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	P+		Up
	-		Vol-
	-		Left
	OK		OK
	+		Vol+
	+		Right
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[']		Setup / OPT /
	PAP/Pause		Pause / Step / Freeze
	Size/Stop		Stop / Hold
	Pos/Play		Play / Slow
	Red/ <		<< / Preset-
	Green/>		>> / Preset+
	Yellow/Pause/<		<< / Tune-





Originalfernbedienung	Ersatzfernbedienung
 Blue/>>>	 >> / Tune+

Originalfernbedienung	Ersatzfernbedienung

