 






 

 



 

 

 
 
 



 
 
 



 




 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Sleep		Sleep
	Mute		Mute
	Aspect		Format
	Freeze		Pause
	Picture		Shift + Format
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	-/--		Shift + Guide
	R		Pre Ch
	Menu		Menu
	EPG		Guide
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Source		AV
	Back		Back
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	PIP		Smart





Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Cancel		Exit
	Index		Shift + Info
	Subpage		Shift + Subt
	Reveal		Media
	Size		Eject
	Hold		Stop
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	Mix		Shift + Text
	TV / T.T.		Text

Originalfernbedienung Ersatzfernbedienung

