
 

 
 

 








 

 

 
 





 
 












Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV / Input / RDS
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[■]/Wide		Zoom / Size
	0		0
	Recall		Back / Return
	Picture		Picture / Format
	Setup		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Tv Menu		Menu / Home
	DVD Menu		D.Menu / Top
	Up		Up
	Left		Left
	Enter		OK
	Play		Play / Slow
	Right		Right
	Vol+		Vol+
	Down		Down
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Red		Red / Netflix / Search
	<<		<< / Tune-
	>>		>> / Tune+
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat



