
 




 



 




 
 


 
 




 




 

 










 
 
 





 
Originalfernbedienung Ersatzfernbedienung

| | | |
|--------------|---|---------------|
| On/Off |  | Power |
| Audio Off |  | Mute |
| Slow Down |  | Ch - |
| Stop |  | Stop |
| Slow Up |  | Ch + |
| Auto/Track |  | Smart |
| Pause |  | Pause |
| Subt. |  | Subt |
| Rep/A-B |  +  | Shift + Text |
| Title |  | List |
| Zoom |  +  | Shift + Eject |
| Repeat/1/All |  | Text |
| DVD/TV |  | AV |
| Menu |  | Menu |
| Menu Up |  | Up |
| Display |  | Info |
| Menu Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | |
|------------|---|---------|
| OK Enter |  | Ok |
| Menu Right |  | Right |
| Return |  | Back |
| Menu Down |  | Down |
| Progr. |  | Sleep |
| Volume+ |  | Vol + |
| Next |  | >> |
| Top Menu |  | D. Menu |
| Volume- |  | Vol - |
| 1 |  | 1 |
| Prev. |  | << |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 | | 7 |



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|--|-----------------------|---------------------|
| Setup |  Options | | |
| 8 |  8 | | |
| Record |  Rec | | |
| F.Forward |  >> | | |
| Angle |  Format | | |
| Play |  Play | | |
| Remain |  Media | | |
| Clear/00:00 |  Exit | | |
| Audio |  Dual | | |
| Rewind |  << | | |
| 9 |  9 | | |
| +10 |  Guide | | |
| 0 |  0 | | |
| C/CH |  Pre Ch | | |
| Open/Close |  Eject | | |
| | | | |
| | | | |

