


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Nicam		Shift + Audio / Lang I/II
	4		4
	5		5
	6		6
	Recall/Goto		Back / Return
	Recall/Goto		Shift + Text /
	7		7
	8		8
	9		9
	0		0
	TV Menu		Menu / Home
	Up		Up


Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Display		Display / Media
	Vol+		Vol+
	Sound		Sound / Title
	CH+		CH+ / Page+
	Vol-		Vol-
	Pic		Picture / Format
	CH-		CH- / Page-
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	DVD/DVB Setup		Setup / OPT /
	DVD Source		Shift + AV / Input / RDS



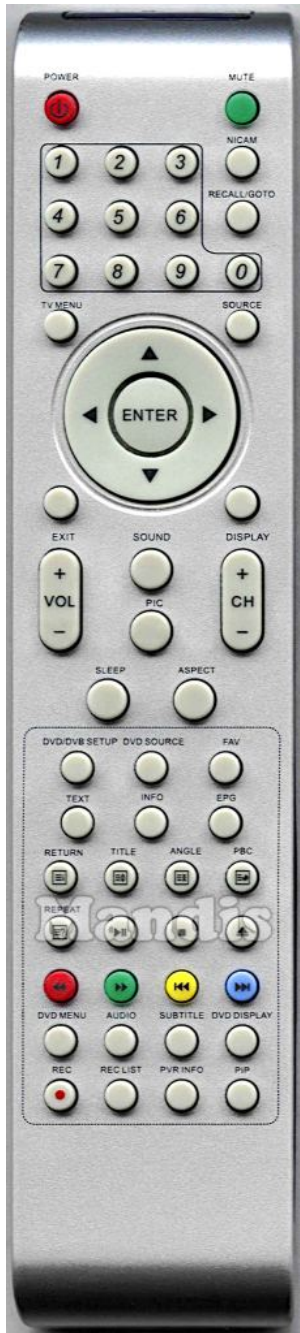

**Originalfernbedienung Ersatzfernbedienung**

	Fav		Fav / Marker / PC
	Text		Text / Goto
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	Return / Index		Shift + Back / Return
	Title / Size		Shift + Sound / Title
	Title / Size		Zoom / Size
	Angle / Hold		Shift + Stop /
	PBC / Subcode		TV/Radio /
	Repeat / Reveal		Shift + Green / APP /
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	Open/Close		Eject / Surround
	Red / <<		<< / Tune-
	Red / <<<		Red / Netflix / Search
	Green / >>>		>> / Tune+
	Green / >>>		Green / APP / Repeat

**Originalfernbedienung Ersatzfernbedienung**

	Yellow / I<<<		I<<< / Preset-
	Yellow / I<<<		Yellow / YouTube / Repeat
	Blue / >>>I		>>>I / Preset+
	Blue / >>>I		Blue / Prime Video / Random
	DVD Menu		D.Menu / Top
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	DVD Display		Shift + Display / Media
	Rec		Rec / Rec Mode
	Rec List		Smart / List
	PVR Info		Shift + Info / Angle
	PIP		Shift + Smart / List

