






 

 
 

 
 

 
 






 



 


 




Originalfernbedienung	Ersatzfernbedienung
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 CH- / Page-
	 CH+ / Page+
	 Green / APP / Repeat
	 Menu / Home
	 Blue / Prime Video / Random

Originalfernbedienung	Ersatzfernbedienung
	 Shift + Up
	 Shift + Menu /
	 Shift + Down
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 OK
	 Up
	 Shift + OK
	 Shift + Power
	 Down
	 Mute / Dimmer

