


 








 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	TV		TV/R
	Menu		Menu
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Info		Info
	Sleep		Sleep
	Last		Pre Ch
	Sound		Dual
	Hold		Stop
	[≡◇]		Media
	Text / Mix		Text
	□		Options
	Index		Smart
	[≡...]		Subt



