
 


 




































 


Originalfernbedienung Ersatzfernbedienung

Update	 + 	Shift + Red / Netflix /
Browse		Smart / List
Reveal	 + 	Shift + Green / APP /
Rotate Text		Setup / OPT /
Off/Tim		Pause / Step / Freeze
On/Tim		Play / Slow
Audio-	 + 	Shift + Vol-
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
3		3
Audio+	 + 	Shift + Vol+
Tone-		<< / Tune-
Mix Scan	 + 	Shift + Text /
Color+ P.Std		Picture / Format
Contrast+		>> / Preset+
Color- S.Std		Sound / Title
Contrast-		<< / Preset-
Surround		Eject / Surround
Nicam/Mono	 + 	Shift + Audio / Lang I/II
Level L	 + 	Shift + Left
Level R/Woofers	 + 	Shift + Right
Display		Display / Media
Mute		Mute / Dimmer



