

 
 
 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	?/Help		Smart
	[]/Tv Format		Format
	[^]/Tv/Radio		TV/R
	*/Mode		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	<<		<<
	Stop		Stop
	Play/Pause		Play
	>>		>>
	Rec		Rec
	Exit		Exit
	i/Info		Info
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	>>I/Next		>>I
	I<</Prev		I<<
	I>/Slow		Pause





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	■/File List		List				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Audio		Dual				
	Subtitle		Subt				
	Sleep		Sleep				
	Text		Text				
	FAV		Pre Ch				
	Status		AV				
	Find		3D				
	Option		Options				

