

 
 
 
 
 
 
 
 
 
 
 


 





 




 

 

 







Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	INFO		Info
	HDMI CONTROL		Media
	SLEEP		Sleep
	SCREEN		Format
	SOURCE		AV
	PRESETS		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0




 


Originalfernbedienung Ersatzfernbedienung

	RETURN		Back
	MENU		Menu
	ZOOM/RED/▲		Red
	REPEAT/GREEN/▼		Green
	ROOT/YELLOW		Shift + Yellow
	TITLE/BLUE		Blue
	OK/SELECT		Ok
	UP		Up
	DOWN		Down
	RIGHT		Right
	LEFT		Left
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -
	FAV		Pre Ch
	LANG		Dual

 
 




Originalfernbedienung Ersatzfernbedienung

	SUBTITLE		Subt
	MUTE		Mute
	SWAP/↔		Exit
	EPG		Guide
	-/--	 + 	Shift + Guide
	TEXT		Text
	C		Yellow
	DISPLAY	 + 	Shift + Info
	ANGLE		3D
	SEARCH MODE		TV/R
	REC		Rec
	STOP		Stop
	PLAY		Play
	PAUSE		Pause
	<<		<<
	>>		>>
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I

