











 



 
 
 
 
 

 

 


 

 



 




 
 
 










 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TXT		Text
	Lang		Dual
	Mute		Mute
	Home		Menu
	V+		Vol +


 

 







 


 

 
 
Originalfernbedienung Ersatzfernbedienung

	V-		Vol -
	P+		Ch +
	P-		Ch -
	[G]		Guide
	i		Info
	Back		Back
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Netflix		Media
	YouTube		Smart
	Prime Video		Shift + Smart
	*1		Format
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

