

 

 
 
 



 
 
 
 

 


 

 

 





 
 


 



 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	i		INFO
	Audio I/II		Audio
	[...]		Subt.
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input Select		SRC
	Guide(EPG)		-/-- / EPG
	Menu		MENU

Originalfernbedienung Ersatzfernbedienung

	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Enter/CH List		OK
	Mute		MUTE
	Picture Size		WIDE
	Vol+		VOL +
	Vol-		VOL -
	P+		CH +
	P-		CH -
	Freeze/[+]		VOD
	Return		EXIT
	P<->P/[=o]/[=*]		BACK
	TV		TV/R
	Media		MEDIA
	Play Mode/Rec		V-FOR



List

