












 
 
 
 

 



 




 




 

 

 





 

 


 
 


 

 

 
 



 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close VCR		Pre Ch
	Open/Close		Guide
	DVD/VCR		Media
	Input Select		Shift + AV
	Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up

 

 

 
 




 
 




 
 
 
 


 



 
 





 

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	P+		Ch +
	P-		Ch -
	TRK+		Vol +
	TRK-		Vol -
	Setup		Options
	Cancel		Exit
	Return		Back
	Title Menu/Top		Menu
	DVD Menu		D. Menu
	One Touch		Green
	Repeat A-B		Text
	Play Mode/Repeat		Shift + Play
	Zoom		Eject

 



 





Originalfernbedienung Ersatzfernbedienung

	CM Skip		Yellow
	Audio/Audio		Dual
	Subtitle/ATR		Subt
	Progressive		Smart
	Clock/Counter		3D
	Angle/00:00:00		Red
	LZero		Format
	Timer Rec		AV
	Rec Mode / Speed	 + 	Shift + Rec
	Dubbing		Blue
	TV/VCR		TV/R
	<<		<<
	Play		Play
	>>		>>
	I<< Skip Index -		I<<
	Stop		Stop
	>>I Skip		>>I

Originalfernbedienung Ersatzfernbedienung

	Rec/OTR		Rec
	Pause II/II<		Pause
	I>		List



Index+