 










 
 

 
 
 







 





 
 


 
 
 





 

 



 
 
 



 
 




 
 
 

 
 






Originalfernbedienung Ersatzfernbedienung




 



 

 

 

 

 






	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	FAV		Pre Ch
	Menu		Menu
	EPG		Guide
	i		Info

Originalfernbedienung Ersatzfernbedienung

	Back		Back
	VOD		Smart
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	PVR		Media
	Red		Red
	Green		Green
	Yellow/Lang		Yellow
	Blue		Blue
	?		Options




**Originalfernbedienung Ersatzfernbedienung**

	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	TV		3D
	Radio		TV/R
	Messages		Subt
	Search		Shift + TV/R
	.:l		Dual

**Originalfernbedienung Ersatzfernbedienung**