
 


 
 

 

 
 
















 
 
 









 




 

 




 



 
 




 

 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Sleep Timer		Sleep	
TV		TV/R	
Video		D. Menu	
Text		Text	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Down		Down	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	
9wxyz		9	
0/10		0	
Radio		Shift + TV/R	
Clear		Exit	






 

 



 
 
 
 
 
 
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Pause		Pause
Stop		Stop
Subt.		Subt
Auto/Track		Sleep
Rep/A-B	 + 	Shift + Text
Title		List
Repeat/1/All		Text
Zoom	 + 	Shift + Eject
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left








 







 





 







 

 

Originalfernbedienung Ersatzfernbedienung

OK Enter		Ok
Menu Right		Right
Return		Back
Menu Down		Down
Progr.	 + 	Shift + Sleep
Volume+		Vol +
Next		>>
Volume-		Vol -
Top Menu		D. Menu
Prev.		<<
1		1
2		2
Search		TV/R
Clear/00:00		Exit
Open/Close		Eject
3		3
4		4










 

 


 

 

 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Setup			Options
5			5
6			6
7			7
8			8
9			9
F.Forward			>>
Rewind			<<
Record			Rec
Audio			Dual
+10			Guide
Random			3D
Angle			Format
0			0
C/CH			Pre Ch












 
 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		2abc	 2
Mute		3def	 3
TV		4ghi	 4
Video		5jkl	 5
Menu		6mno	 6
Menu Up		7pqrm	 7
Menu Left		8tuv	 8
OK Enter		9wxyz	 9
Menu Right		Guide Pilote	 Guide
Exit		0/10	 0
Menu Down		FAV Pref.	 Pre Ch
Volume+		Red	 Red
CH/Page+		Green	 Green
Volume-		Yellow	 Yellow
Audio		Blue	 Blue
CH/Page-		Store	 List
1. ?	 1		





 
 



 

 







Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Pause		Pause
Stop		Stop
Slow Up		Ch +
Title		List
Subt.		Subt
Auto/Track		Sleep
Rep/A-B	 + 	Shift + Text
Repeat/1/All		Text
Zoom	 + 	Shift + Eject
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok

Originalfernbedienung Ersatzfernbedienung

Progr.	 + 	Shift + Sleep
Next		>>
Menu Right		Right
Prev.		<<
Return		Back
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
1		1
2		2
3		3
Top Menu		D. Menu
4		4
5		5
6		6
7		7
Open/Close		Eject



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Setup	 Options	C/CH	 Pre Ch
Search	 TV/R		
Audio	 Dual		
Mark	 Smart		
Record	 Rec		
NTSC/PAL	 Format		
F.Forward	 >>		
Play	 Play		
3D	 3D		
Clear/00:00	 Exit		
Rewind	 <<		
8	 8		
Angle	 AV		
9	 9		
Random	 Media		
+10	 Guide		
0	 0		

