








 





 





 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<</Zoom+		<< / Tune-
	>>/Zoom-		>> / Tune+
	Lan/Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Tv/Radio		TV/Radio /
	Text		Text / Goto
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Back / Return
	V+		Vol+
	Auto		Smart / List
	Ch+		CH+ / Page+
	V-		Vol-
	Game		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
	EPG		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green/Lan/Audi		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	A1		Shift + 1
	A2		Shift + 2
	A3		Shift + 3
	A4		Shift + 4
	B1		Shift + 5
	B2		Shift + 6
	B3		Shift + 7
	B4		Shift + 8

Originalfernbedienung Ersatzfernbedienung

