

 




 









 
 
 
 

 
 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Still		Format
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute




 

 




 

 
 
 







 
 

 
 

Originalfernbedienung Ersatzfernbedienung

	i		Info
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Exit		Exit
	Option		Options
	Back/Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	TV		TV/R
	Media		Media
	Guide		Guide
	[+]		3D
	Timer		Shift + AV





Originalfernbedienung Ersatzfernbedienung

	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	STTL		Subt
	Sound		Shift + Dual
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung