


 
 

 

 


 
 

 

 

 



 
 



 










 




 
 


 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Last View		Pre Ch
	Radio/Tv		TV/R
	Internet		Smart
	Netflix		Media
	Rec		Rec
	Prog/Check		Sleep

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>		>>
	<<		<<
	Pause		Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	Exit		Exit
	i/Status		Info
	Return		Back
	Guide		Guide
	Function Menu		Menu
	Video Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left



