



 
 


 

 

 

 

 
 
 
 
 




 

 


 

 

 


 

 



 
 
 
 
 

 

 
 
 
 
 
 




 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		D. Menu
	Audio		Dual
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Disc/SD		AV

Originalfernbedienung Ersatzfernbedienung

	iPod/Radio/Ext-In		TV/R
	PIP		3D
	<< Search/Slow		<<
	Play		Play
	Search/Slow >>		>>
	I<< Skip/↓		I<<
	Pause		Pause
	Skip >>I↑		>>I
	Stop		Stop
	Status		List
	Exit		Exit
	Viera Cast		Media
	Home		Smart
	Pop-Up Menu/Top Menu		Menu
	Option		Options
	Up		Up
	Return		Back



