



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		Red
	VCR		Green
	TV / AV		AV
	AUX		Shift + Red
	Tuner / Band		Yellow
	DVD / CD		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0











 
 
 
 



 



 




 

 


**Originalfernbedienung    Ersatzfernbedienung**

	≧10 / -/-		Guide
	Cancel		Exit
	CH +		Ch +
	CH -		Ch -
	Volume +		Vol +
	Volume -		Vol -
	I<< Skip		I<<
	>>I Skip		>>I
	<< Slow/Search		<<
	>> Slow/Search		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu / Direct Navigator		Shift + Menu
	Top Menu / Direct Navigator		List
	Menu / Play List		Menu
	Up		Up


 





 



 


 


 



 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Functions		Smart
	Return		Back
	Subwoofer		Shift + Dual
	Super SRND.		Shift + Options
	H.Bass		Shift + D. Menu
	SFC		D. Menu
	C.Focus		3D
	Dolby PL II		Format
	Mix 2CH		Shift + Format
	Sleep		Sleep
	Quick OSD		Info
	Zoom		Eject
	Manual Skip		Shift + >>I

**Originalfernbedienung    Ersatzfernbedienung**

	Audio		Dual
	Subtitle		Subt
	Muting		Mute
	Setup		Options
	FL Display		Shift + Info
	Group		TV/R
	Angle / Page		Shift + TV/R
	Repeat		Text
	Play Mode		Shift + Play
	Advanced Disc Review		Shift + Smart
	Quick Replay		Media
	Play Speed		Shift + Pause
	CH Select		Pre Ch
	Test		Shift + Text





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Power AV	+	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide
	Tv/AV		AV
	CH+		Ch +
	CH-		Ch -
	Tv Vol+		Vol +

**Originalfernbedienung    Ersatzfernbedienung**

	Tv Vol-		Vol -
--	---------	--	-------





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power AV	+	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≧10 / -/-		Guide
	>>		>>
	<<		<<
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Play		Play
	Stop		Stop

