

 

 



 

 

 

 

 



 

 













 

 

 





 


 
 

 

 
 

 











Originalfernbedienung Ersatzfernbedienung

	Power VCR		Power
	Power Tv		Shift + Power
	Replay		Blue / Prime Video / Random
	OSD/Display		Display / Media
	Exit		Exit / Cancel / Clear
	AV Link		AV / Input / RDS
	Audio		Audio / Lang I/II
	Search		Red / Netflix / Search
	Rec		Rec / Rec Mode
	Index >>I		>>I / Preset+
	I<< Index		I<< / Preset-
	Tracking-V-Lock		CH+ / Page+
	Tracking-V-Lock Down		CH- / Page-
	AV Tv		Shift + AV / Input / RDS
	Volume+ Tv		Vol+
	Volume- Tv		Vol-
	CH+ Tv		Shift + CH+ / Page+

Page+

Originalfernbedienung Ersatzfernbedienung

	CH- Tv		Shift + CH- /
	Menu		Menu / Home
	Input		Smart / List
	Reset		Back / Return
	Pause/Step		Pause / Step / Freeze
	OK		OK
	Stop		Stop / Hold
	Down		Down
	Play		Play / Slow
	Up		Up
	Right		Right
	>>		>> / Tune+
	<<		<< / Tune-
	Left		Left
	Prog/Check		TV/Radio /
	Cancel		Shift + Exit / Cancel / Clear
	SP/LP/EP		Picture / Format





**Originalfernbedienung Ersatzfernbedienung**

	Timer		Sleep / Timer
	Prog/Check Up		Shift + Up
	Prog/Check		Shift + Down
	Date+		1
	Date-		4
	On+		2
	On-		5
	Off+		3
	Off-		6

**Originalfernbedienung Ersatzfernbedienung**