



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV
	Top Menu		Menu
	Disc Menu		D. Menu
	Smart TV		TV/R
	Bluetooth		Guide
	Home		Smart
	[≡]		Text
	OK		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung Ersatzfernbedienung**

	Open/Close		Eject
	Return		Back
	III		Options
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	<		<<
	>		>>
	Vol+		Vol +
	Vol		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4



