



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	CD		1
	Bluetooth/Pairing		2
	FM		3
	USB/Audio In		4
	I<<		I<<
	Play		Play
	Pause		Pause
	>>I		>>I
	Stop		Stop
	><		Guide
	Recall		Pre Ch
	Album/Preset		Ch +
	Album/Preset		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

**Originalfernbedienung Ersatzfernbedienung**

	Sound		Dual
	Display		Info
	Prog		Sleep
	Sleep/Timer		AV
	Clock/Scan		Media

