


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Colors		Format
	Ambilight		3D
	Pair/Sources		AV
	≡*/Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	Home		Smart
	+		Options
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop


 

 

 

 










Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Netflix		Shift + Media
	Windows		Media
	Rakuten Tv		Shift + Smart
	P +		Ch +
	P-		Ch -
	TV/Exit		Exit
	1		1
	2		2





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	TV Guide/List		Guide

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------