


 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	O		Guide
	Rec		Rec
	I<<		I<<
	Red		Red
	Green/[]		Green
	Stop		Stop
	Play		Play
	Yellow / List		Yellow
	>>I		>>I
	PIP []		Blue
	AV/[?]		AV
	I-II/[≡≡]		Dual
	[<>]/[+]		Format
	[-O-]		Exit
	Menu		Menu
	[≡]		Text

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Smart J		Smart
	Smart []		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4


 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	O		Guide
	Rec		Rec
	I<<		I<<
	Red		Red
	Green/[]		Green
	Stop		Stop
	Play		Play
	Yellow / List		Yellow
	PIP []		Blue
	>>I		>>I
	AV/[?]		AV
	I-II/[≡≡]		Dual
	[<>]/[+]		Format
	-O-		Exit
	Menu		Menu
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	[≡]		Text
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Smart J		Smart
	Smart []		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------


 
 
 

 
 

 



 

 
 


 
 





 
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P<P		Pre Ch




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	I<<		I<<
	>>I		>>I
	AV/[?]		AV
	I-II[≡ ≡]		Dual
	[<>]/[+]		Format
	-O-		Exit
	Pause		Pause
	[≡]		Text
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Smart J		Smart
	Smart []		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch

