

 






























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red / Netflix / Search
	Green / I-II		Sound / Title
	Green / I-II		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[i+]		Info / Angle
	[↕]		Display / Media
	[□]		AV / Input / RDS
	[?]		Smart / List
	Smart Audio		Audio / Lang I/II
	Radio		TV/Radio /
	Smart Picture		Picture / Format
	Menu		Menu / Home
	Up		Up
	[≡]		Text / Goto
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Sleep		Sleep / Timer



