



























 


 
























 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|------------------|
|  | Power |  | Power |
|  | DVD |  | Shift + 2 |
|  | Open / Close |  | Eject / Surround |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Return |  | Back / Return |
|  | 0 |  | 0 |
|  | Display |  | Display / Media |
|  | Disc Menu |  | D.Menu / Top |
|  | Up |  | Up |











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|------------------------|
|  | System Menu |  | Menu / Home |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | I<< |  | I<< / Preset- |
|  | Down |  | Down |
|  | >>I |  | >>I / Preset+ |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | Pause / Step |  | Pause / Step / Freeze |
|  | Marker |  | Fav / Marker / PC |
|  | Search |  | Red / Netflix / Search |
|  | Subtitle |  | Subtitle / EQ |
|  | Audio |  | Audio / Lang I/II |
|  | Angle |  | Info / Angle |
|  | Zoom |  | Zoom / Size |
|  | Repeat |  | Green / APP / Repeat |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------------|
|  | Repeat A-B |  | Yellow / YouTube / Repeat |
|  | Program |  | TV/Radio / |
|  | Clear |  | Exit / Cancel / Clear |
|  | Title |  | Sound / Title |
|  | Shuffle |  | Blue / Prime Video / Random |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

















 









 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

























Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|------------------|
|  | Power |  | Power |
|  | TV / VCR |  | TV/Radio / |
|  | VCR |  | Shift + 4 |
|  | Eject |  | Eject / Surround |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Display |  | Display / Media |
|  | Up |  | Up |
|  | System Menu |  | Menu / Home |



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|----------------------------|
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | I<< |  | I<< / Preset- |
|  | Down |  | Down |
|  | >>I |  | >>I / Preset+ |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | Pause / Step |  | Pause / Step / Freeze |
|  | Marker |  | Fav / Marker / PC |
|  | Search |  | Red / Netflix / Search |
|  | Input |  | AV / Input / RDS |
|  | Rec / ITR |  | Rec / Rec Mode |
|  | Program |  | Shift + TV/Radio / Program |
|  | Clear |  | Exit / Cancel / Clear |
|  | LP |  | Setup / OPT / |
|  | C.Lock |  | Back / Return |





Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung | Ersatzfernbedienung |
|---|--|
|  |  Smart / List |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Originalfernbedienung Ersatzfernbedienung

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

