



Originalfernbedienung Ersatzfernbedienung




 



 





 
 














 

 
 
	Standby / On		Power
	TV		1
	BD / DVD		2
	STB		3
	Analog		4
	BT Audio		Smart
	Surround		Subt
	Dialog		Dual
	Auto Level		List
	Night		Sleep
	Up / Volume +		Up
	Up / Volume +		Vol +
	Down / Volume		Down
	Down / Volume		Vol -
	Right / Subwoofer Vol +		Right
	Right / Subwoofer Vol +		Ch +
	Dimmer		TV/R






 
 

 

Originalfernbedienung Ersatzfernbedienung

	Left / Subwoofer Vol -		Left
	Left / Subwoofer Vol -		Ch -
	Mute		Mute
	Lip Sync		3D
	Status		Info





Originalfernbedienung	Ersatzfernbedienung
 Standby / On	 Power
 TV	 1
 BD / DVD	 2
 STB	 3
 Analog	 4
 BT Audio	 Smart
 Surround	 Subt
 Dialog	 Dual
 Auto Level	 List
 Night	 Sleep
 Up / Volume +	 Up
 Up / Volume +	 Vol +
 Down / Volume	 Down
 Down / Volume	 Vol -
 Right / Subwoofer Vol +	 Right
 Right / Subwoofer Vol +	 Ch +
 Dimmer	 TV/R

Originalfernbedienung	Ersatzfernbedienung
 Left / Subwoofer Vol -	 Left
 Left / Subwoofer Vol -	 Ch -
 Mute	 Mute
 Lip Sync	 3D
 Status	 Info

