 









 











 





 

 

 

 



 

 



 





 

 

 

 

 

 

 

 







**Originalfernbedienung    Ersatzfernbedienung**













 


 








 

 

	Muting		Mute / Dimmer
	Power		Power
	Up		Up
	FQ. +		Shift + Vol+
	Left		Left
	MPX		Audio / Lang I/II
	Enter		OK
	Disp. Mode		Display / Media
	Right		Right
	Vol -		Vol-
	Down		Down
	FQ. -		Shift + Vol-
	Vol +		Vol+
	Channel -		CH- / Page-
	Channel +		CH+ / Page+
	DVD / LD		Shift + 2
	TV / Sat		Shift + 1

**Originalfernbedienung    Ersatzfernbedienung**

	CD		Shift + 3
	VCR 1		Shift + 4
	TV Control		TV/Radio /
	Tuner		Shift + 6
	VCR 2		Shift + 7
	MD / Tape		Shift + 5
	1		1
	Dolby		Sound / Title
	2		2
	DSP Mode		Smart / List
	3		3
	4		4
	Midnight		Sleep / Timer
	5		5
	CH. Select		Fav / Marker / PC
	6		6
	Test Tone		Text / Goto





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	7		7
	ATT.		Guide / EPG / -/--
	8		8
	Sig. Select		Setup / OPT /
	9		9
	CH. Level -		Shift + CH- /
	0 / CH. Level +		0
	CH. Level +		Shift + CH+ /
	Effect -		Shift + Down
	Class		Picture / Format
	Effect +		Shift + Up
	Function		D.Menu / Top
	Direct		Subtitle / EQ
	FL Dimmer		Shift + Mute / Dimmer

