





 

 



 









 

 

 











Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Sleep		Sleep / Timer
	Timer		Shift + Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Input Sel. CD		3
	Input Sel. Bluetooth		9
	Input Sel. Network		Fav / Marker / PC
	Input Sel. Tuner		6
	Input Sel. USB		8
	Input Sel. Line Digital		2
	I<< / Preset-		I<< / Preset-
	Play / Pause		Pause / Step / Freeze
	Play / Pause		Play / Slow
	>>I / Preset+		>>I / Preset+
	<< / Tune-		<< / Tune-
	Stop		Stop / Hold
	>> / Tune+		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Repeat / Shuffle		Green / APP / Repeat
	Memory		Smart / List
	Clear		Exit / Cancel / Clear
	Mode		Picture / Format
	i / Now Playing		Info / Angle
	Left		Left
	Up		Up
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Volume+		Vol+
	Sound		Sound / Title
	Volume-		Vol-
	Mute		Mute / Dimmer

