





 
 

 




Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	UP		Up
	LEFT		Left
	ENTER		Enter
	RIGHT		Right
	DOWN		Down
	PAGE UP		Shift + Vol + / Page +
	PAGE DOWN		Shift + Vol - / Page -
	▲		Shift + Up
	KEYSTONE UP		Mode
	KEYSTONE		Comp / Video
	◀		Shift + Left
	↶		Shift + Enter
	▶		Shift + Right
	▼		Shift + Down
	VOLUME-		Vol - / Page -
	VOLUME+		Vol + / Page +

Originalfernbedienung Ersatzfernbedienung

	MENU		Menu
	STATUS		Eco / Aspect
	MUTE		Shift + Blank / Mute
	AUTO		Auto
	BLANK		Blank / Mute
	SOURCE		Source
	FREEZE		Freeze / Timer
	ZOOM+		+ / Play
	ZOOM-		- / Stop

