



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	P+		Shift + CH+ / Page+

Page+

Originalfernbedienung Ersatzfernbedienung

	P+		>> / Preset+
	P-		Shift + CH- /
	P-		l<< / Preset-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Up		CH+ / Page+
	Down		CH- / Page-
	OK		OK
	Right		Vol+
	Fav		Fav / Marker / PC
	Left		Vol-
	Info		Info / Angle
	Lang / Red		Red / Netflix / Search
	Lang / Red		Audio / Lang I/II
	Pause / Blue		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

PAUSE	Pause / Blue	STEP-FREEZE	Pause / Step / Freeze
SOUND	Sound / Green	APP REPEAT	Green / APP / Repeat
SOUND	Sound / Green	TITLE SOUND	Sound / Title
TEXT	Text / Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
TEXT	Text / Yellow	GOTO TEXT	Text / Goto
SAT	SAT	SHIFT + HDMI-SAT 0	Shift + 0
SAT	SAT	LIST SMART	Smart / List
RECALL	Recall	RETURN BACK	Back / Return
TV/SAT	TV / SAT	MEDIA DISPLAY	Display / Media
EPG	EPG	GUIDE EPG	Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

