
 
 
 
 





 
 
 

 

 


 





 
 
 

 
 

 

 
 

 


 


 

 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Mute		Mute	
Every Pop		3D	
Tape 1 Preset		List	
Vol Rs-/Effect		Subt	
Tape 1 Stop	 + 	Shift + Stop	
Preset Pause	 + 	Shift + Pause	
Sleep		Sleep	
CD Random		TV/R	
Tape 2 Pre./eq		Dual	
Repeat		Text	
Vol Rs+/S.Mode		Eject	
Input/Source		AV	
CD/Theater		Media	
Display		Info	
CD Play		Play	
Funct./Direct		Smart	
Woofer/Speed		Back	
CD Rewind		<<	
CD F.FWD		>>	
Volume+		Vol +	
CD Pause		Pause	
Volume-		Vol -	
Tape 1 Hall/Ats		Options	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Pr 4		4	
Pr 5		5	
Pr 6		6	
Pr 7		7	
Pr 8		8	
Program	 + 	Shift + Sleep	
Pr 9		9	



Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Mode	 Guide		
Tape 1 Rew	 +  Shift + <<		
Tape 1 Rec	 +  Shift + Rec		
Tape 1 F.FWD	 +  Shift + >>		
Pr 0/10	 0		
Tape 1 Play	 +  Shift + Play		
ON/Off	 +  Shift + Power		
Disc 1 Eject	 +  Shift + 1		
Disc 2	 +  Shift + 2		

