
 







 
 


 







 

 














 



 
 

 
 


Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Subt.		Subt
Auto/Track		3D
Title		List
Slow Up		Ch +
Rep/A-B		Shift + Text
Menu		Menu
Stop		Stop
DVD/TV		TV/R
Pause		Pause
Pepeat/1/All		Text
Progr.		Sleep
Next		>>I
Return		Back
Top Menu		D. Menu

Originalfernbedienung Ersatzfernbedienung

Zoom		Shift + Eject
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down
Volume+		Vol +
Prev.		I<<
Volume-		Vol -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
8		8					
9		9					
+10		Guide					
Record		Rec					
0		0					
Play		Play					
Rewind		<<					
C/CH		Pre Ch					
F.Forward		>>					
Mark	 +  Shift + 7						
Open/Close		Eject					
Input Source		AV					

