













 

 













 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|--------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | DTV/ATV |  | Shift + AV / Input / RDS |
|  | 0 |  | 0 |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------|
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | MTS |  | Shift + Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Rec List/D.Setup |  | Setup / OPT / |
|  | Rec List/D.Setup |  | Smart / List |
|  | CH- |  | CH- / Page- |
|  | Rec |  | Rec / Rec Mode |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------------|---|-------------------------------|
| | Open/Close | | Eject / Surround |
| | Play | | Play / Slow |
| | Pause/Timeshift | | Pause / Step / Freeze |
| | Stop/Freeze | | Stop / Hold |
| | << | | << / Tune- |
| | Guide | | Guide / EPG / /-- |
| | >> | | >> / Tune+ |
| | Aspect | + | Shift + Picture / Format |
| | I<< | | I<< / Preset- |
| | Tv/Radio | | TV/Radio / |
| | >>I | | >>I / Preset+ |
| | FAV List | | Fav / Marker / PC |
| | Zoom/Index | | Zoom / Size |
| | Angle/Cancel | + | Shift + Exit / Cancel / Clear |
| | Angle/Cancel | | Info / Angle |
| | Audio/Subpage | | Audio / Lang I/II |
| | Subtitle | | Subtitle / EQ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|---|-----------------------------|
| | D.Menu/Reveal | | D.Menu / Top |
| | Size/D.Title | + | Shift + Sound / Title |
| | Size/D.Title | + | Shift + Zoom / |
| | Goto/Hold | + | Shift + Stop / |
| | Goto/Hold | + | Shift + Text / |
| | Text/D.Display | + | Shift + Display / Media |
| | Text/D.Display | | Text / Goto |
| | Red/Prog | + | Shift + TV/Radio / Program |
| | Red/Prog | | Red / Netflix / Search |
| | Green/Step | + | Shift + Pause / Step / |
| | Green/Step | | Green / APP / Repeat |
| | Yellow/Repeat | | Yellow / YouTube / Repeat |
| | Yellow/Repeat | + | Shift + Green / APP / |
| | Cyan/A-B | | Blue / Prime Video / Random |
| | Cyan/A-B | + | Shift + Yellow / YouTube / |

