 



**Originalfernbedienung    Ersatzfernbedienung**

|   |              |   |            |
|---|--------------|---|------------|
|    | Standby      |    | Power      |
|    | TV / STB     |    | AV         |
|    | Mute         |    | Mute       |
|    | Recall       |    | Back       |
|    | TTXT         |    | Text       |
|    | Signal       |    | Smart      |
|    | Capture      |    | 3D         |
|    | Subt         |    | Subt       |
|    | Timer        |   | Shift + AV |
|    | I<<          |    | I<<        |
|   | <<           |   | <<         |
|  | >>           |  | >>         |
|  | >>I          |  | >>I        |
|  | USB File     |  | Media      |
|  | Play / Pause |  | Play       |
|  | Play / Pause |  | Pause      |
|  | Stop         |  | Stop       |






 

 


 
 
 
 
 

 

 
 


 

 
 
 


**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |              |
|---|-----------|---|--------------|
|    | Rec       |    | Rec          |
|    | Menu      |    | Menu         |
|    | Exit      |    | Exit         |
|    | CH+ / PG+ |    | Ch +         |
|    | CH- / PG- |    | Ch -         |
|    | Vol+      |    | Vol +        |
|    | Vol-      |    | Vol -        |
|    | Up        |    | Up           |
|    | Left      |    | Left         |
|    | OK        |    | Ok           |
|   | Right     |   | Right        |
|  | Down      |  | Down         |
|  | Find      |  | Shift + TV/R |
|  | EPG       |  | Guide        |
|  | Info      |  | Info         |
|  | FAV       |  | Pre Ch       |
|  | SAT List  |  | List         |

 

 

 

 

 
 




Originalfernbedienung Ersatzfernbedienung

|  |   |
|--|---|
|  Mosaic         |  Format        |
|  CH List        |  Shift + List  |
|  TV / Radio     |  TV/R          |
|  Feed           |  D. Menu       |
|  Red / Pause    |  Red           |
|  Red / Pause    |  Shift + Pause |
|  Green / Zoom   |  Green         |
|  Green / Zoom   |  Eject         |
|  Yellow / Audio |  Yellow        |
|  Yellow / Audio |  Dual          |
|  Blue / Sleep |  Blue        |
|  Blue / Sleep |  Sleep       |
|  1            |  1           |
|  2            |  2           |
|  3            |  3           |
|  4            |  4           |
|  5            |  5           |

Originalfernbedienung Ersatzfernbedienung

|   |   |
|---|---|
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |

