



 







 

















 





 



 



 

 



 





 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	E3	 + 	Shift + Guide / EPG / -/-
	E2	 + 	Shift + 9
	Mute		Mute / Dimmer
	A1	 + 	Shift + 1
	A2	 + 	Shift + 2
	B1	 + 	Shift + 3
	B2	 + 	Shift + 4
	C1	 + 	Shift + 5
	C2	 + 	Shift + 6
	D1	 + 	Shift + 7
	D2	 + 	Shift + 8
	EQ		Subtitle / EQ
	1		1
	2		2
	3		3
	OSD		Display / Media

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	L/R		Audio / Lang I/II
	7		7
	8		8
	9		9
	P/N		Picture / Format
	Repeat		Green / APP / Repeat
	0/10		0
	10+		Guide / EPG / -/-
	Zoom		Zoom / Size
	TV-Mode		TV/Radio /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow









 

 



Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	USB/Card		Smart / List
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	2.1/5.1CH		Sound / Title
	CH-Sel		Fav / Marker / PC
	Reset		Exit / Cancel / Clear
	Treb+		CH+ / Page+
	Sub+		Shift + CH+ / Page+

Page+









 




 
 

 





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Input		AV / Input / RDS
	Treb-		CH- / Page-
	Sub-		Shift + CH- /
	Vol-		Vol-








Originalfernbedienung Ersatzfernbedienung

A1		Shift + 1
A2		Shift + 2
B1		Shift + 3
B2		Shift + 4
C1		Shift + 5
C2		Shift + 6
D1		Shift + 7
D2		Shift + 8
		Power
E2		Shift + Guide / EPG / -/-
E3		Shift + 0
E4		Shift + Fav / Marker / PC
E1		Shift + 9
		Mute / Dimmer
		Subtitle / EQ
		1
		2



Originalfernbedienung Ersatzfernbedienung

	3		3
	OSD		Display / Media
	4		4
	5		5
	6		6
	L/R		Audio / Lang I/II
	7		7
	8		8
	9		9
	P/N		Picture / Format
	Repeat		Green / APP / Repeat
	0/10		0
	10+		Guide / EPG / -/-
	Zoom		Zoom / Size
	TV-Mode		TV/Radio /
	I<<		I<< / Preset-
	>>I		>>I / Preset+









 

 



Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	USB/Card		Smart / List
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Reset		Exit / Cancel / Clear
	Treb+		CH+ / Page+
	Sub+		Shift + CH+ / Page+

Page+

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Input		AV / Input / RDS
	Treb-		CH- / Page-
	Sub-		Shift + CH- /
	Vol-		Vol-

