
 



 
 







 


 


Originalfernbedienung Ersatzfernbedienung

POWER		Power
MUTE		Mute
DISPLAY		Info
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
--		Guide
RETURN		Back
VOL+		Vol +
VOL-		Vol -

Originalfernbedienung Ersatzfernbedienung

^ CH+		Up
v CH-		Down
<		Left
>		Right
PLAY/ENTER		Ok
MENU		Menu
		Pause
<<		<<
>>		>>
<<		<<
>>		>>
EDJECT		Eject
STOP		Stop
ZOOM		Shift + Eject
SUBTITLE		Subt
SLOW		Rec
INPUT		AV



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
>	 Play		
ANGLE	 Pre Ch		
PCB	 TV/R		
REPEAT	 Text		
∧ CH+	 Ch +		
∨ CH-	 Ch -		
AUDIO	 Dual		
A-B	 D. Menu		
SETUP	 Options		

