 

 

 

 



 

 













 



 





 



 

 

 

 

 























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	SUBT.		Subtitle / EQ
	TV		TV/Radio /
	Tools		Setup / OPT /
	TTX/MIX		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	PRE-CH		Back / Return
	VOL+		Vol+











Originalfernbedienung Ersatzfernbedienung

	CH.LIST		Smart / List
	PR+		CH+ / Page+
	VOL-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	GUIDE		Guide / EPG / -/-
	0		0
	FAV.CH		Fav / Marker / PC
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Enter		Shift + OK
	Return		Shift + Back / Return

Originalfernbedienung Ersatzfernbedienung

