

 

 

 

 



 

 

 

 









 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject / Surround
	Source		AV / Input / RDS
	USB		Shift + 8
	DTV/Analog		Smart / List
	HDD		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv/DVD		Display / Media
	0		0

Originalfernbedienung Ersatzfernbedienung

	Copy		Setup / OPT /
	I<<		I<< / Preset-
	Repeat		Shift + Green / APP /
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Tv Vol+		Vol+
	Mute		Mute / Dimmer
	Prog+		CH+ / Page+
	Tv Vol-		Vol-
	Audio		Audio / Lang I/II
	Prog-		CH- / Page-
	Menu		Menu / Home
	Up		Up



