




 

 

 

 

 

 

 

 

 

 

 

 

 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PowerTv	 + 	Shift + Power
	Eject		Eject / Surround
	TTX/MIX		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DiscMenu		D.Menu / Top
	0		0
	TitleMenu/POPUP		Sound / Title
	I<<		I<< / Preset-








 

 


 

 



Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Tv Vol+		Vol+
	Tv Mute		Mute / Dimmer
	Prog+		CH+ / Page+
	Tv Vol-		Vol-
	Tv Source		AV / Input / RDS
	Prog-		CH- / Page-
	CH List	 + 	Shift + Smart / List
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Up		Up









Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	Smart HUB		Smart / List
	Search		Shift + Red / Netflix /
	3D		Picture / Format
	E-Manual		Sleep / Timer
	Web Browser		Display / Media
	RecTV/List		Shift + Rec / Rec Mode



 

 

 



 

 


 
 

 
 


Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Rec Pause		Shift + Pause / Step /






 





 

 

 
 
 

 

 


 


 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	TTX/MIX		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Vol+		Vol+
	Mute		Mute / Dimmer
	Prog+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	Prog-		CH- / Page-
	CH List		Shift + Smart / List
	Home		Menu / Home
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Smart Hub		Smart / List
	Search		Shift + Red / Netflix / Search
	3D		Picture / Format
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

