 
 







 




 
 

 
 

 
 
 
 
 

 

 







| Originalfernbedienung | Ersatzfernbedienung |
|---|--|
|  Power |  Power |
|  Tv Power |  Shift + Power |
|  Source |  AV |
|  Auto Power |  Sleep |
|  Speaker |  Pre Ch |
|  Tv Source |  Shift + AV |
|  Repeat |  Text |
|  Any net |  Media |
|  Soundshare |  Dual |
|  Tv Vol+ |  Shift + Vol + |
|  Tv Vol- |  Shift + Vol - |
|  Tv CH+ |  Ch + |
|  Tv CH- |  Ch - |
|  Audio Sync+ |  3 |
|  Audio Sync- |  6 |
|  Tv Mute |  Shift + Mute |
|  Tv Info |  Info |

| Originalfernbedienung | Ersatzfernbedienung |
|---|---|
|  Tv Pre-CH |  Back |
|  Dimmer |  0 |
|  I<< |  I<< |
|  Stop |  Stop |
|  Play |  Play |
|  Pause |  Pause |
|  >>I |  >>I |
|  Sound Effect |  Menu |
|  Smart Volume |  Smart |
|  3D Sound Plus |  3D |
|  DRC |  Subt |
|  Right S/W Level |  Right |
|  Left S/W Level |  Left |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |

