








 




 

 

 
 
 
 
 
 

 

 




 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	Pre-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	CH List		List
	Tv Portal		Media
	Menu		Menu
	EPG		Guide
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 Audio	 Dual
 SUB	 Subt
 Rec	 Rec
 <<	 <<
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 >>	 >>

Originalfernbedienung Ersatzfernbedienung

