 



 
 
 
 
 
 
 

 



 






 

 
 


 

 


 
 
 
 

 


 
 


 



 

 
 


 

 

 
 

 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|-------|
|  | Power |  | Power |
|  | Source |  | AV |
|  | Open/Close |  | Eject |
|  | Sleep |  | Sleep |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Dolby PL |  | Dual |
|  | DSP/EQ |  | Guide |
|  | I<<< |  | I<<< |

 



 

 
 
 

 
 
 








 

 
 


 
 



 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|------------|---------------------------------------------------------------------------------------|---------|
|  | >>I |  | >>I |
|  | << |  | << |
|  | >> |  | >> |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Repeat |  | Text |
|  | Tuning+ |  | Ch + |
|  | Tuning- |  | Ch - |
|  | Disc Menu |  | D. Menu |
|  | Menu |  | Menu |
|  | Title Menu |  | TV/R |
|  | Tools |  | Options |
|  | Info |  | Info |








 
 

 

 
 
 
 

 

 

 
 
 

 
 



 

 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------|-------|
|  | Power |  | Power |
|  | Function Tv |  | AV |
|  | Sleep |  | Sleep |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | << |  | << |
|  | >> |  | >> |
|  | Stop |  | Stop |
|  | Play |  | Play |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------------------------|---------|
|  | Pause |  | Pause |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Menu |  | Menu |
|  | Tools |  | Options |
|  | Info |  | Info |
|  | Return |  | Back |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Red |  | Red |



