


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Shift + 1
	Tuner		Shift + 2
	Aux		Shift + 3
	USB		Shift + 4
	Open / Close		Eject
	TV / Video		TV/R
	1 / RDS Display		1
	2		2
	3 / TA		3
	4 / PTY -		4
	5 / PTY Search		5
	6 / PTY +		6
	7		7
	8		8
	9		9
	0 / Video Sel		0

Originalfernbedienung Ersatzfernbedienung

	Remain		Guide
	Cancel		Exit
	<<		<<
	Repeat		Text
	Step		Shift + Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	>>I		>>I
	Volume +		Vol +
	Volume -		Vol -
	Mute		Mute
	Tuning + / CH +		Ch +
	Tuning - / CH -		Ch -
	Menu		Menu



