 

 




 

 

 
 
 


 
 
 
 
 
 

 

 
 
 
 
 
 



 

 

 


 
 

 
 
 

 

 
 
 

 



 
 
 





 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Bonusview		Media
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Audio		Dual
	l<<		l<<
	>>l		>>l

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Disc Menu		D. Menu
	Menu		Menu
	Popup / Title	 + 	Shift + Menu
	Popup / Title		List
	Tools		Options
	Info		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return		Back





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Smart HUB		Smart
	Search		TV/R
	Repeat		Text
	TV Power		Shift + Power
	TV Source		AV
	TV Vol +		Vol +
	TV Vol -		Vol -
	TV Mute		Mute
	TV CH +		Ch +
	TV CH -		Ch -

Originalfernbedienung Ersatzfernbedienung

